






Hermic bv
 Hoge Mauw 1030
 B 2370 Arendonk
 Tel +32 (0) 14 65 91 39
 Fax +32 (0) 14 65 97 75
 eric.bax@hermic.be
 BTW : BE0821 906 635



1. **Check outside rubber**

Put system glazing plate to construction, bottom, left, right

ATTENTION: DO NOT MIX GLASS BEADS, glass beads must be mounted in same place!!!

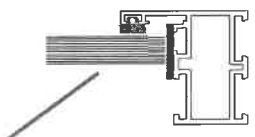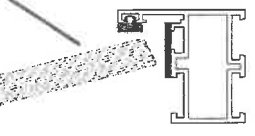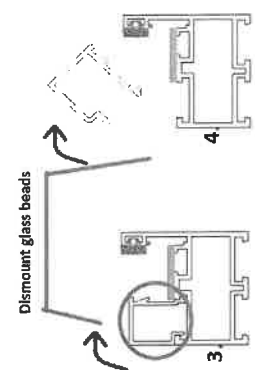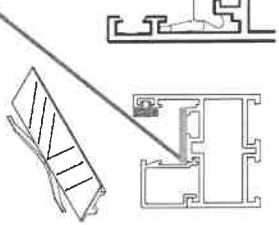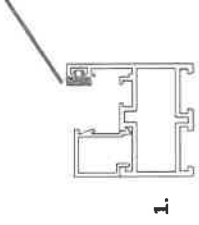

1.

2.

3.

4.


5.

6.




7. **Cut colour glazing PVC plates on half and place on the system plates**
 Remember to lift the glass, you can use for example plastic tool (check movie manual)

Put glazing PVC plates left and right to hold the glass

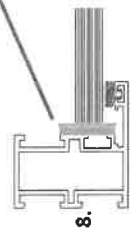


8.

Click glass beads again in their place

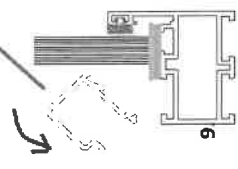


9.

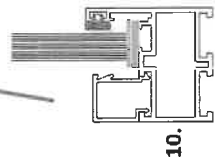

10.

Put inside glazing rubber in the place
 Length of the rubber must be 1.2 cm longer

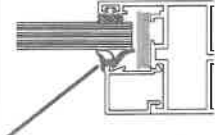

11.

